



User manual

Ionisor for footwear

Attention! Do not touch the needles when unit turned on!

Function:

By the combination of three worldwide approved cleaning technologies the device guarantees maximum in cleaning: dust cleaning, removal of bacteria and removal of disagreeable smells. This is reached by a highly effective Ion generator. This generates negatively loaded ions which destroy per second up to 30 Bn. Bacteria, viruses and mites. The achievement admission amounts merely to 3W. Active oxygen generator by electron beams: the electron beam generated by electrodes splits the oxygen molecules in its atoms which are also called active oxygen. Active oxygen is able to clean the air, to eliminate smoke and to neutralize disagreeable smells.

Well-being effect:

AIRBUTLER Jason takes care of your shoes in a special way. **AIRBUTLER** Jason removes bad smells from stressed interior material inside your shoes. Through air circulation **AIRBUTLER** Jason dries out your shoes and thereby denies mushroom spores to survive and develop.

Low-noise construction:

AIRBUTLER Jason works without blower and is with regular care silently.



JASON



Applicable areas:

AIRBUTLER Jason is to have on around your neck. The appliance eliminates dust, bacteria directly in front of your mouth and nose. The air you breathe Attention! Personal ioniser is clean, fresh and full of negative ions. You can humidify the air by dropping some water into the cavities suited for this purpose.

Application:

Appropriate for all kind of strongly stressed footwear. When frequently used **AIRBUTLER Jason** takes optimal care of the material and extend the lifetime and comfort of your shoes.

Introduction:

Connect **AIRBUTLER Jason** in the wall outlet. Use the enclosed net cable/adaptor or use batteries (4 pcs. DC6V batteries) The batteries are inserted in each tube/side by turning the end caps of. When the batteries (2 in each side) are inserted close the end caps and turn **AIRBUTLER Jason ON**. A green light indicates operation. Then just insert **AIRBUTLER Jason** into your shoes.

Device settings:

AIRBUTLER Jason has 2 levels – low – high. When used in high **AIRBUTLER Jason** turns off automatic after 10 Minutes, when used in low after 6 hours. In order to save batteries use the adaptor when possible.

Servicing / cleaning:

Change the batteries when the green light changes into orange/red light.

IMPORTANT:

- Keep during operation a distance of at least 50 cm to the outlet of the device.
- Put no metallic subjects in the device to avoid surges and damages. The device must be kept away from all inflammable and explosive subjects.
- The device may not be exposed to water and steam.
- Avoid placement in the direct sun and close to heat springs like stoves etc. which could deform the case.
- For the cleaning of the case no alcohol or gasoline may be used, because these damage the surface.

Further information:

This ioniser purifies air; it is not a substitution of regular airing of rooms. Do not modify the appliance in any way. Neither the manufacturer nor the trader can accept any responsibility of any kind damage thus resulting.

Accessories:

1 Adaptor 12 V

Technical Data:

Type	AIRBUTLER Jason
Voltage	230 V / 4 x C# batteries
Power consumption	1 W
Negative ions	$> 9,5 \times 10^5$
Active oxygen	$< 0,08$ ppm
Dimension	200x140x70 mm
Weight	205 g
Applicable area	Shoes and Gloves

AIRBUTLER reserves the right of any technical modifications of the appliance.

We are at your service for questions or application problems: office@airbutler.com



Warranty for Jason

1. All **AIRBUTLER** products are subjected to stringent testing before they leave the factory. Guarantee of function for two years from date of purchase.
2. Damage and malfunctions within the warranty period are only dealt with on presentation of the completed warranty certificate. Please return the appliance to the trader so that the cause of malfunction can be identified. If the damage or malfunction is due to a production fault then the appliance will be repaired immediately or replaced with a new appliance. Damage which is not due to a production fault cannot be taken into account.
3. The warranty does not include any damage due to incorrect handling, faulty re-assembly, manual conversion in or on the appliance, omission of cleaning, exterior damage to the appliance or obvious damage to the interior of the casing (such as e.g. lightning, artificial cause or natural events).
4. The date on the warranty certificate and submission of the bill are imperative for any warranty claims.

✂.....

Name: _____

Address: _____

Purchase date: _____

Phone: _____

Stamp of trader: _____